


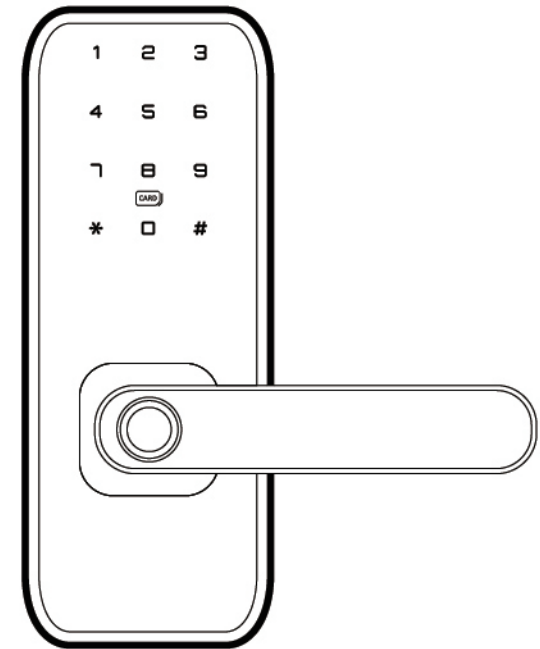

SMART LOCK INSTRUCTIONS


1. Product parameters

Number of users : Fingerprint 100, Password 150, Card 100
Bluetooth standards : Bluetooth 5.0BLE
System support : Android 4.3 / IOS 7.0 +
Unlocking mode : APP, password, fingerprint, credit card, key
Fingerprint Head Type : Semiconductor fingerprint head
Number of password digits : 6 ~ 10 bits
Number of passwords : APP Send password (unlimited), custom password (150)
Scheme of electric power supply : 4 x AA alkaline dry batteries
Operating current : 180mA
Standby current : 60uA
Operating temperature : -20~60°C
Low voltage alarm : 4.8V ± 0.2V is lower than 4.8V when unlocking, broadcast low power reminder, need to replace the battery.
Fakeadmission Rate : ≤0.00004%
Authenticity : ≤0.015%

Tips: Please store your mechanical key outdoors for backup!

2. Inspection of Basic Fittings


Open the package and take out the products and accessories, check whether the items are complete.

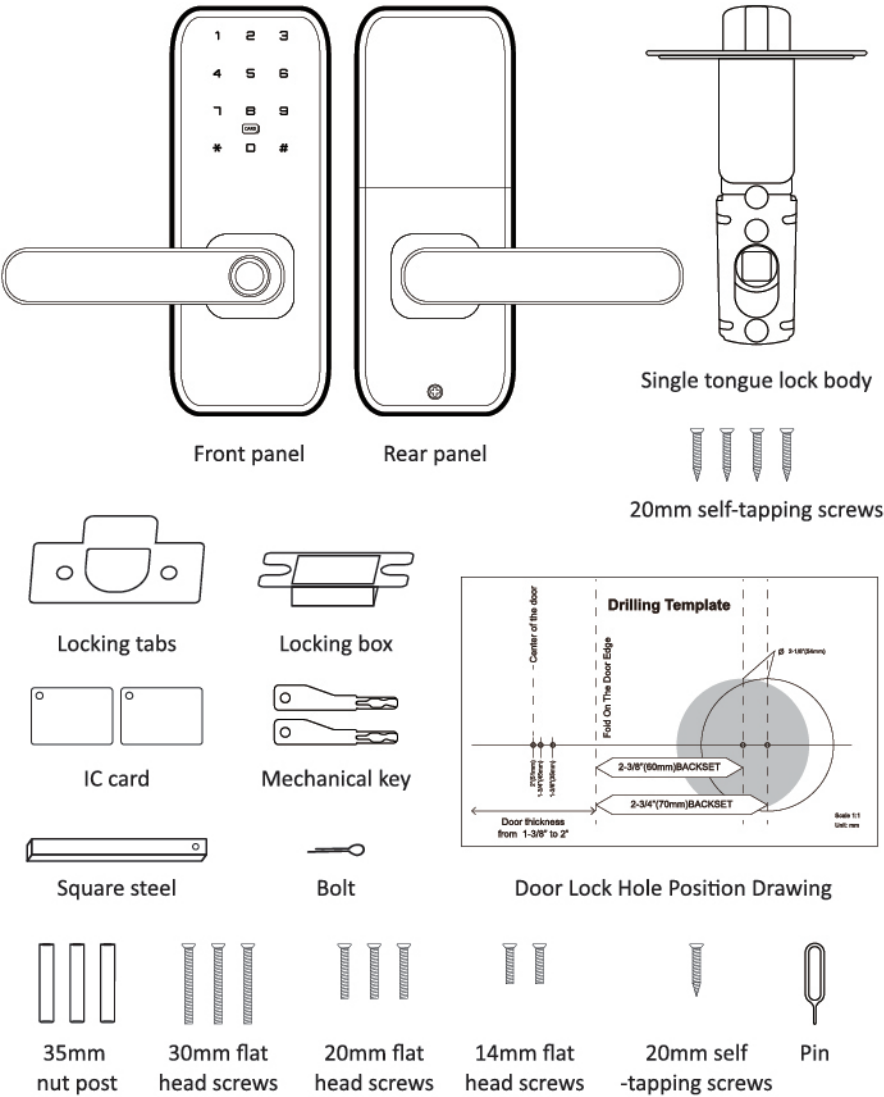

3. Door handle reversing left and right


Right door replacement direction:

With double tongue triangle symbol arrow up.
When equipped with a single tongue lock body,
the triangle symbol is mounted in the R direction.

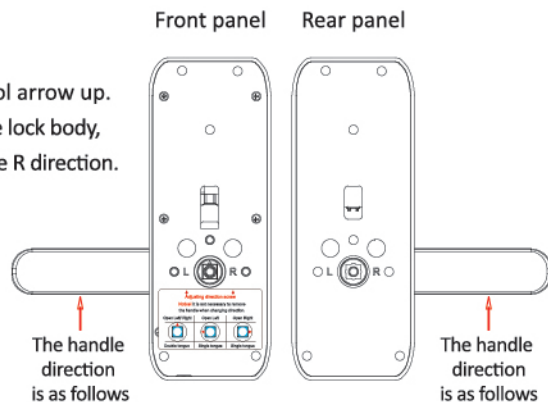


Change direction of left open door:

With double tongue triangle symbol arrow up.
When equipped with a single tongue lock body,
the triangle symbol is mounted in the L direction.

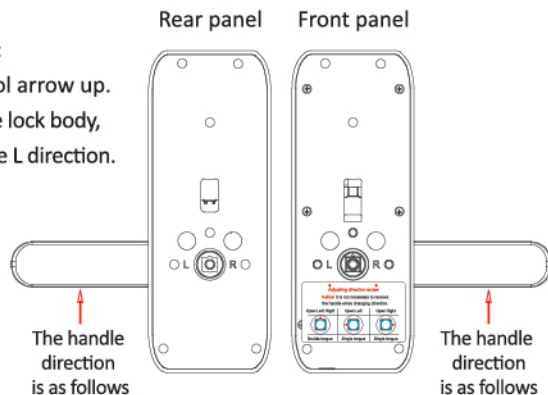


Note: When changing the left and right door handles on the front and back panels, press down the handle about 15°, remove the adjustment screw in the panel with a phillips screwdriver, and install it in another hole.

Screw hole for adjusting direction

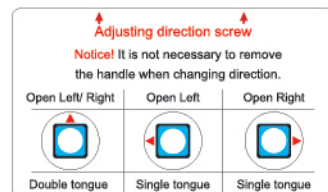


4. Installation Steps

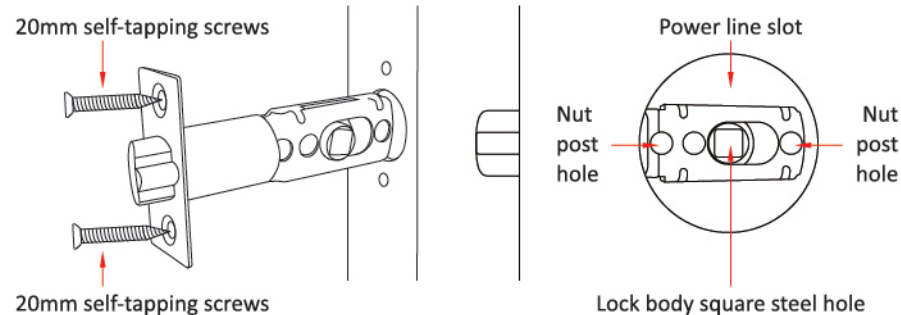

Installing lock body

Put the lock body into the corresponding door slot and fix the lock body up and down with screws.

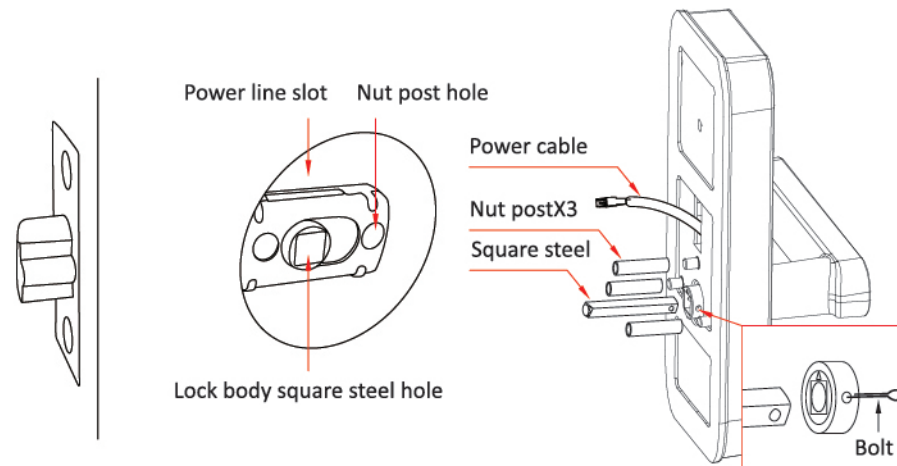


Installing the front panel


1. Use the bolt to pass through the square steel hole to clamp the latch and fix the square steel on the hole.
2. Screw down the front panel with 3 nut post. To use the double tongue lock body just screw the 2 nut post columns.
3. Turn the clutch to the corresponding position.
4. Insert the power cord from the front panel through the door hole and insert the nut post and square steel into the lock body.
5. Install the silicone pad on the rear metal panel (iron plate), install the 30/20mm flat head screws to the nut post of the front panel and tighten it.

Installing the rear panel

1. Connect the front and rear panel power cable, and put the surplus power cable into the door frame holes.
2. Remove the battery cover plate, the square steel pore of the rear handle is directed to the square steel on the door, and two 14mm flat head screws are installed.
3. Install the four AA batteries and close the battery cover plate.
4. Test door lock electrification, installation completed.

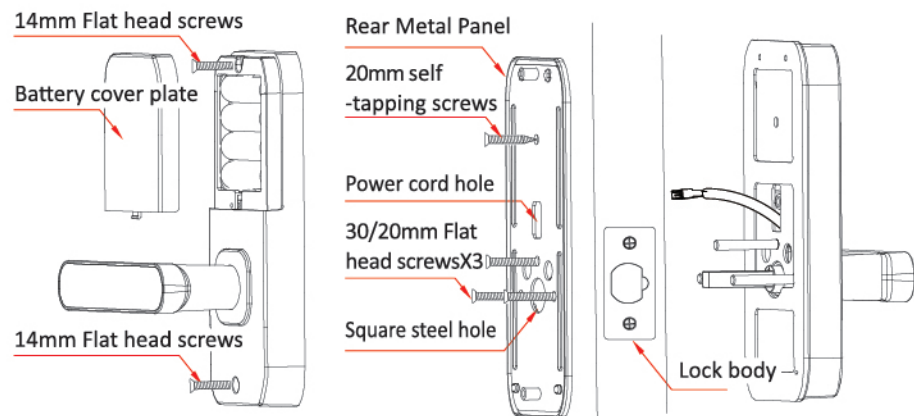

5. Product

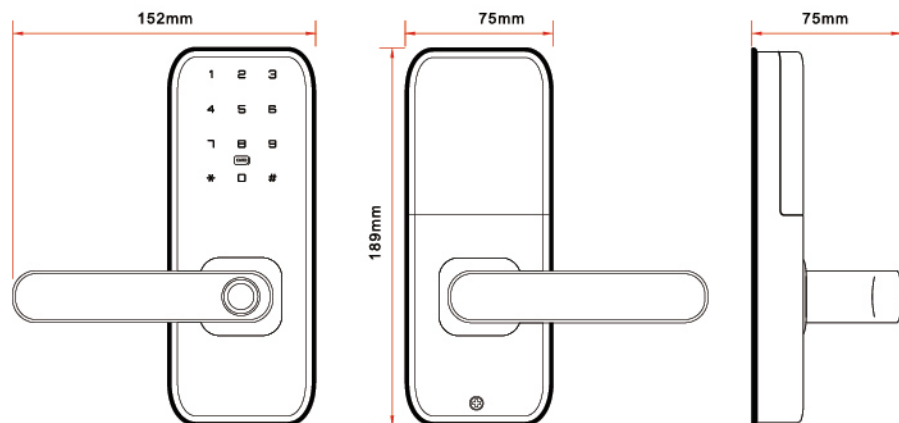


★ Manual measurement, there is error, please refer to the actual product size.

6. The app explains.

APP application download

The iOS version of the software can be downloaded from the App Store and the Android version from google play, App Store, Baidu, Ali, 360, Huawei, Xiaomi and other app markets.


1. Scan the QR code on your mobile phone to download the Tong Tong Lock App
2. Search for "TTLock" in the application market to install and download.

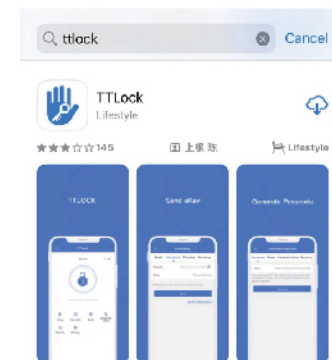


User registration and login

User registration: On the login page, click on "Register" in the top right corner and enter your mobile phone number or email address, set your password and click Register.

User Login: On the login page, enter your account and password and click "Login".

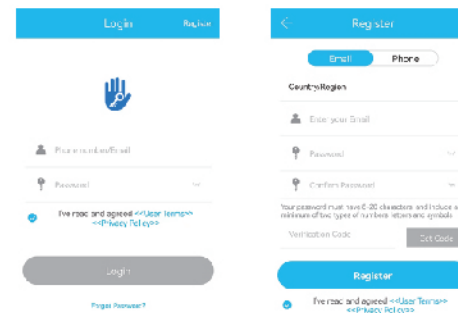


Add Door Lock Device

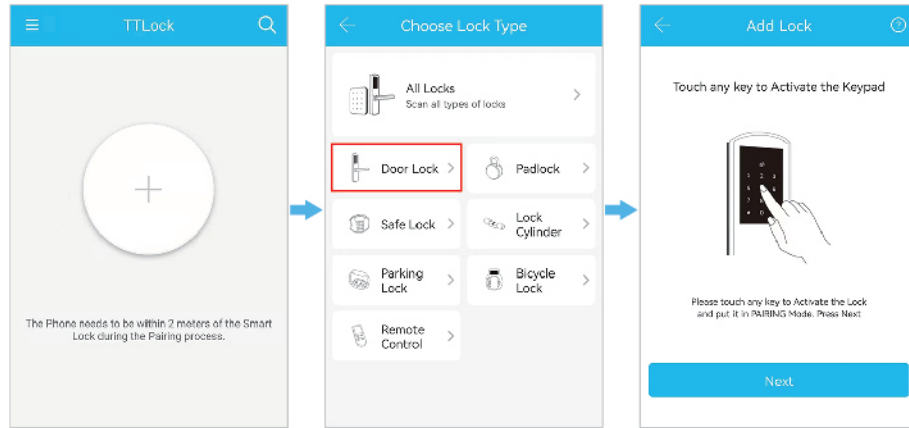

Add a Lock

Select Door Lock

Light Up Keypad

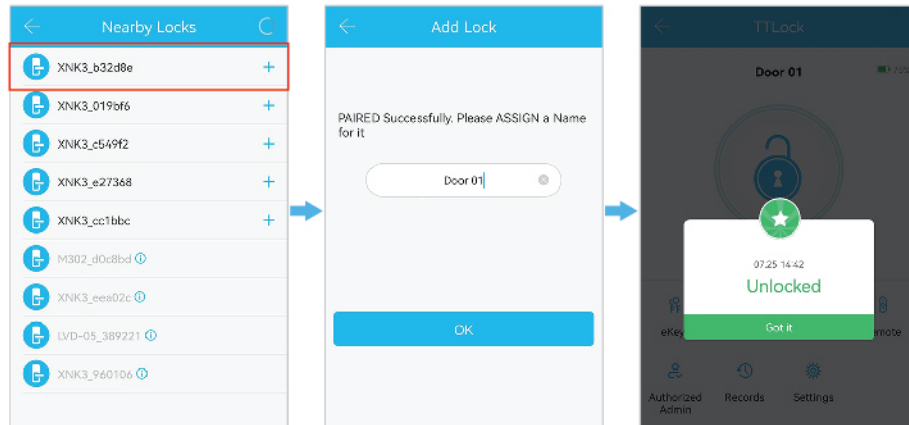


Select Lock

Enter Name

Operation complete


Set Up Fingerprint Unlock

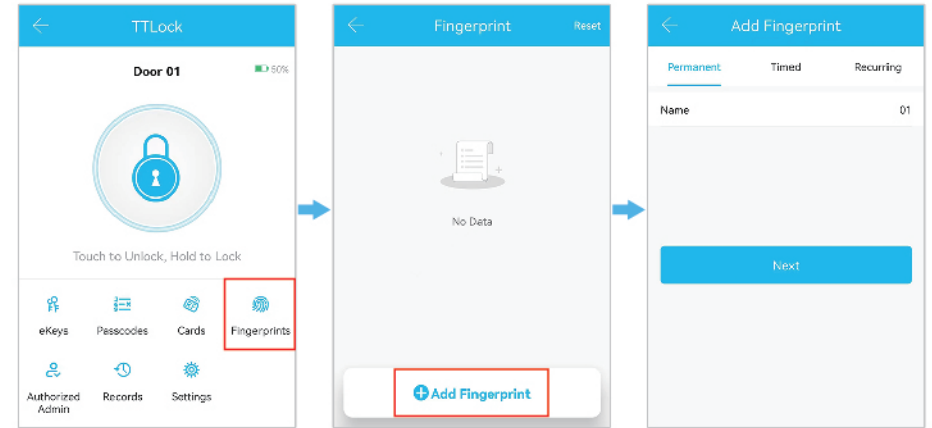

Select on the main page
Fingerprints

Click Add Fingerprint

According to the customer's
door opening needs
Select fingerprint type

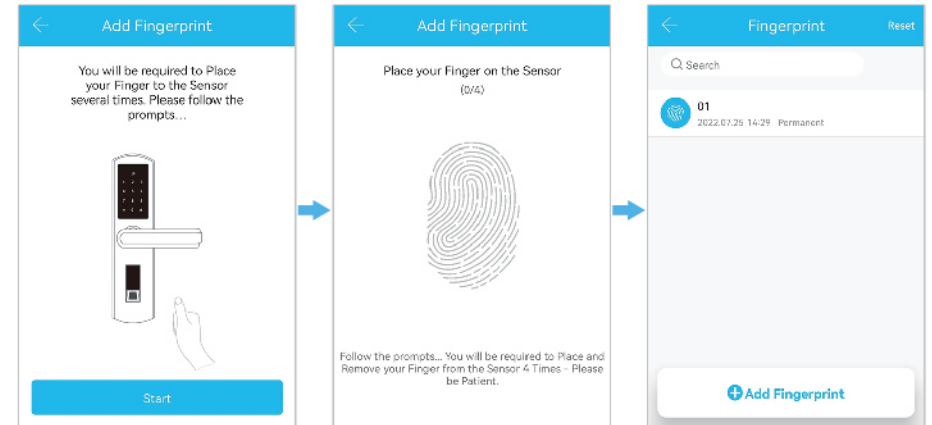


Bring your phone close to the
door lock device click Start


Follow the prompts to
collect fingerprints

Fingerprint collection
completed


Set Password To Unlock

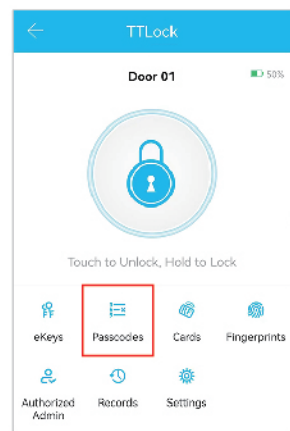


Select on the main page
Passcodes

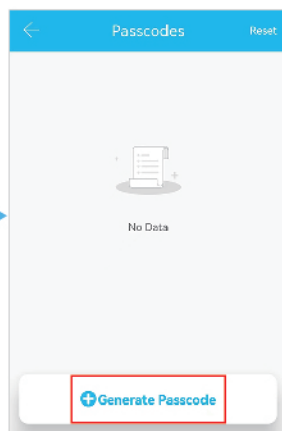


Select Generate Passcode

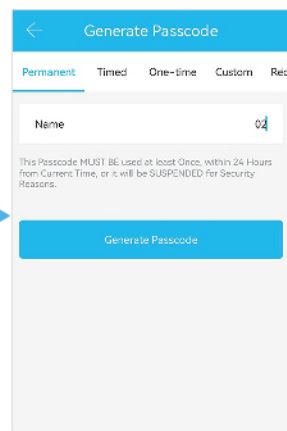



Select the password type
according to the use
requirements of the door lock

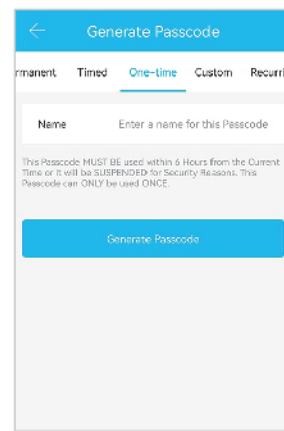



Get One-time password
1. Select One-time
2. Name the password
3. Click Generate Passcode

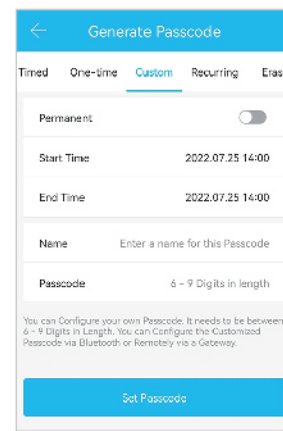


Get Custom password
1. Select Custom
2. Set Start Time or End Time or enable permanent option
3. Name the password
4. Set a 6-digit password
5. Click Generate Passcode

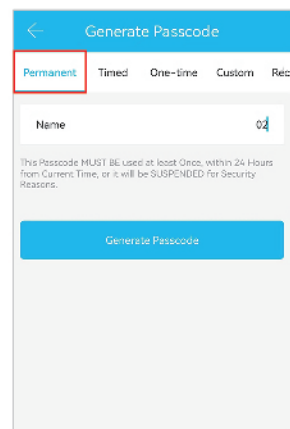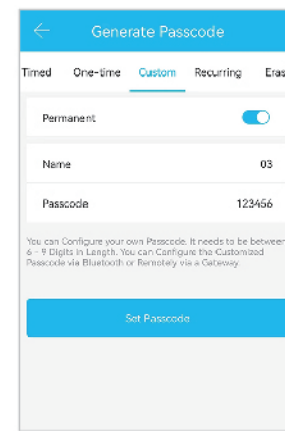


Get Permanent password
1. Select Permanent
2. Name the password
3. Click Generate Passcode
4. Click finish or share to send password

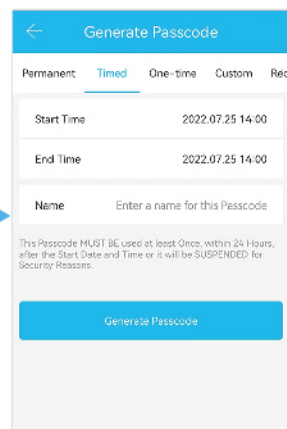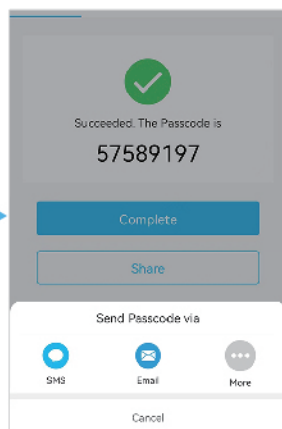


Get Timed password
1. Select Timed
2. Set Start Time or End Time
3. Name the password
4. Click Generate Passcode


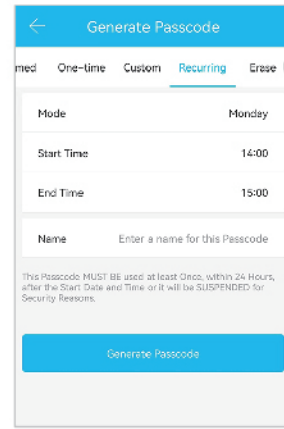


Get Recurring password
1. Select Recurring
2. Set repeat mode
3. Set Start Time or End Time
4. Name the password
5. Click Generate Passcode

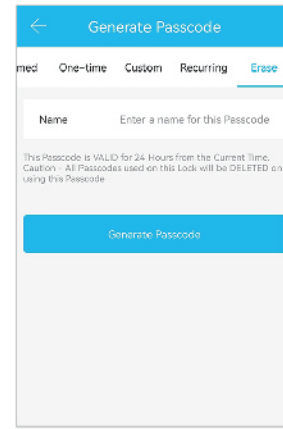

Erase password
1. Select Erase
2. Enter the password on the door lock
device and clear all passwords

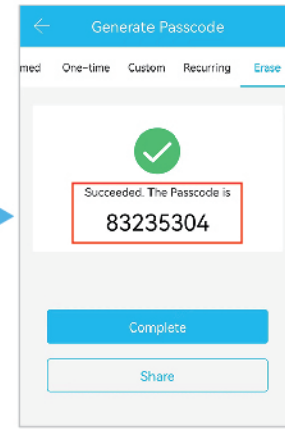

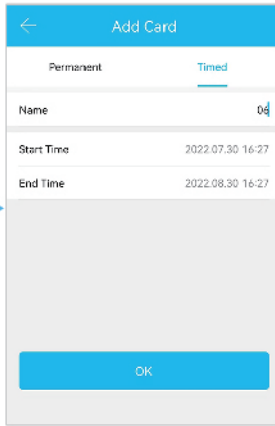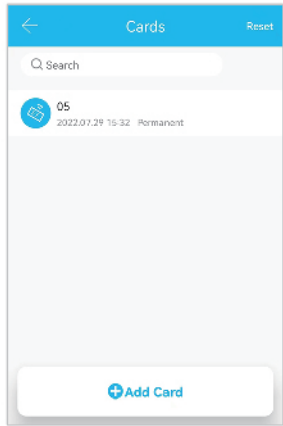

Set to add IC card


1. Select on the main page Cards
2. Click Add Card
3. Choose Permanent or time
4. Name the password
5. Set the effective expiration time
6. Click OK

(When adding, the card needs to be close to the card reading area of the lock)



Add a remote

1. Select on the main page Remote
2. Click to add remote
3. Select remote control type
Select Permanent, Timed, Recurring
4. Name the remote and click Next
5. When the light flashes, click Next
6. Linking device
7. Add finished

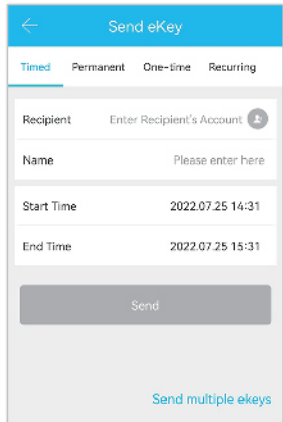

Password sharing


1. Select on the main page eKey
2. Select the type of password to share
3. Choose who to send
4. Click Send

Timed : The validity period can be set, the shortest is 1 hour and the longest is 3 years. If the validity period is less than one year the time is accurate to the hour; if the validity period exceeds one year, the time is accurate to the month. The password must be used within 24 hours after it takes effect, otherwise it will automatically expire.

Permanent: Set a password that will always be used from now on. The password must be used within 24 hours after it takes effect, otherwise it will automatically expire.


One-time : Can only be used once and is valid for 1 hour.

Recurring : It can be used repeatedly within the specified time interval, and types such as daily cycle, weekday cycle and weekend cycle can be set.

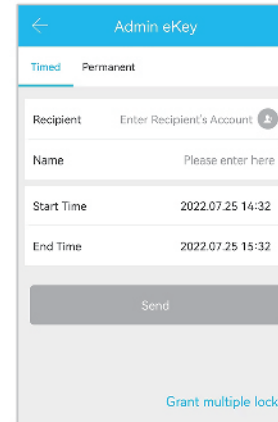



Authorized Admin

1. Select on the main page Authorized Admin
2. Click Add Authorized Administrator
3. Select administrator type Timed, Permanent
4. Fill in the account number and name of the other party
5. Set Start Time or End Time
6. Click Send

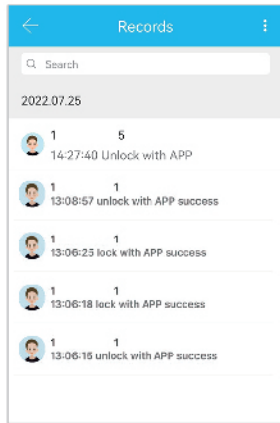


Open door record query

Select on the main page Records
It is also possible to search the door opening records of a single user.

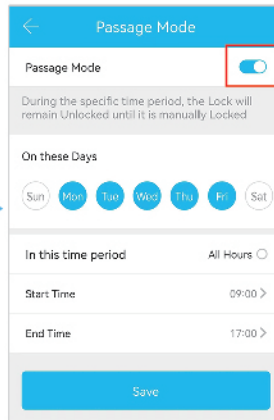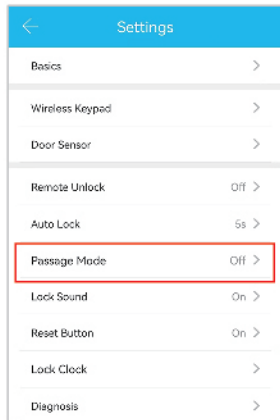

Passage Mode

1. Select on the main page Settings
2. Choose Passage Mode
3. Open Password query
4. Set opening hours
5. Click Save

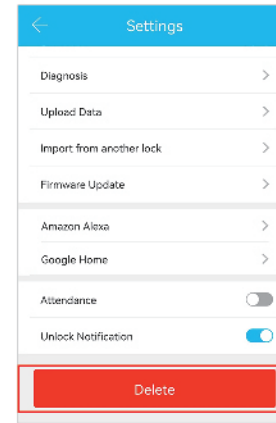

Restore Factory Settings

Delete the device at TT lock app, after click the delete, it need fill your register password and also press # at the panel of lock, then app will show deleted successfully.

Off-Line

1. Open the battery cover.
2. Press and hold the reset button below the battery with your hand.
3. Hear the voice prompt "Please enter the initialization password".
4. Enter "000" and the ""#"" key.
5. System initialization is complete.

How to Verify Password Correctly

After entering the correct password, press "#" to hear the prompt sound "di~". The number light on the password keypad lights up, and the password verification is successful. Press the handle to open the door.