

Intelligent lock usage instructions



1. Product parameters

Number of users:	Number of fingerprint storage: 100 PIN + IC Card Number of Storage: 100
Quiescent Current:	≤65uA
Dynamic Current:	<250mA
Working Voltage:	6.5V When unlocking below 4.8V, a low voltage reminder will be broadcast. Please pay attention to replacing the battery;
External Power Supply:	5V USB
Opening method:	APP, fingerprint, password, IC card, key
Normal Open Mode:	After unlocking using administrator information successfully unlocking, press and hold the "5#" key to enter the normally open mode
Operation Temperature:	-25℃~60℃
Working Humidity:	20%-80%RH
Number Of Password Digits:	6~10bits
Virtual Password:	Virtual password+total length of 22 characters
System Lock:	The system automatically locks after 5 failed unlocking attempts Unlock after 3 minutes of automatic locking
Fakeadmission Rate:	≤0.00004%
Authenticity:	≤0.015%

Tips: Please store your mechanical key outdoors for backup!



Installation Notes

Install the lock body

Left and right reversal of lock body

When installing, the lock body, the oblique tongue should face upward, and the oblique surface of the oblique tongue should face the direction of the front panel. If it does not match, the direction of the oblique tongue should be adjusted, Methods as below:

1. Turn the lock body upside down, with the oblique tongue facing down, and let the oblique tongue stop block lean down. As shown in ②
2. Press the oblique tongue by hand into the lock body to the end and rotate it 180°.
3. Release the oblique tongue, let the oblique tongue pop out along the oblique tongue hole, and reverse the lock body Figure ③

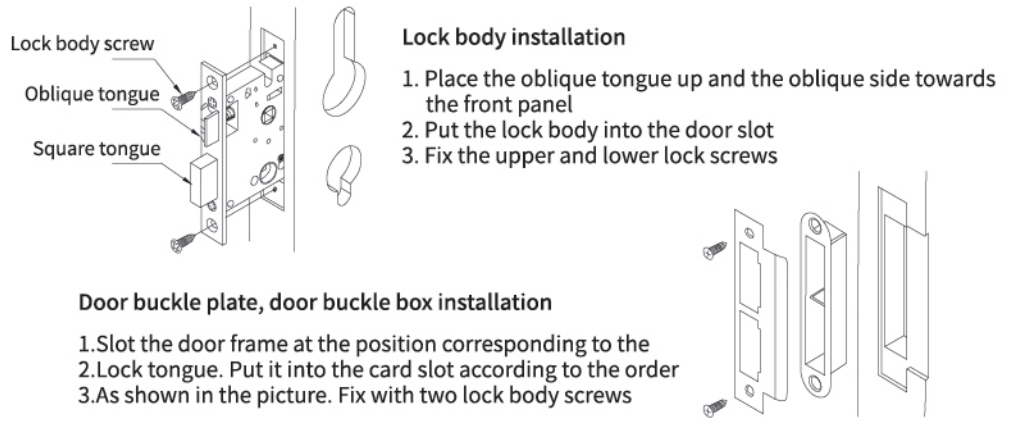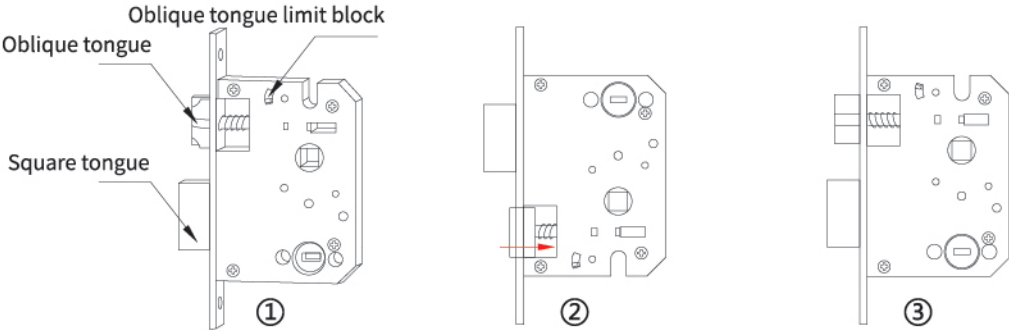

Door buckle plate, door buckle box installation


1. Slot the door frame at the position corresponding to the
2. Lock tongue. Put it into the card slot according to the order
3. As shown in the picture. Fix with two lock body screws

Door handle reversing left and right

Open the right door and change the direction:
To open the right door, turn the clutch triangle symbol to the "50" position.
Note: When equipped with a single tongue lock body, turn the triangle symbol to the R direction to install.



Adjusting direction screw
Notice! It is not necessary to remove the handle when changing direction.


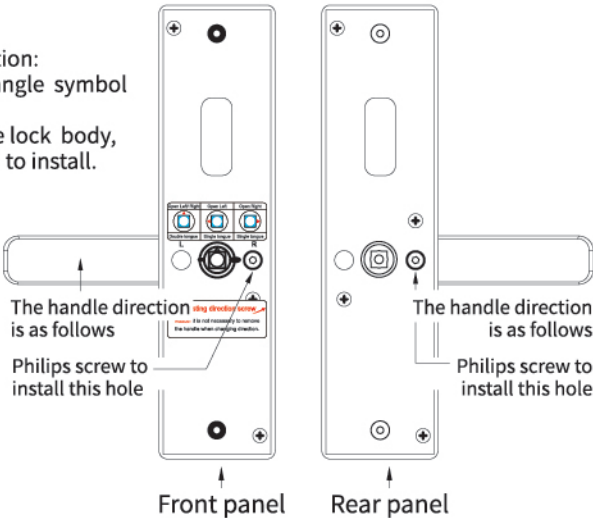


Reversing the direction of the left door:

When opening the door on the left, rotate the clutch triangle symbol to the "50" position.
Note: When equipped with a single tongue lock body, turn the triangle symbol to the L direction to install.

Note:

When changing the left and right door handles on the front and rear panels, use a Phillips screwdriver to remove the Phillips adjusting screw handle in the panel and rotate it upwards 180°, and install it into another hole with a Phillips screw.

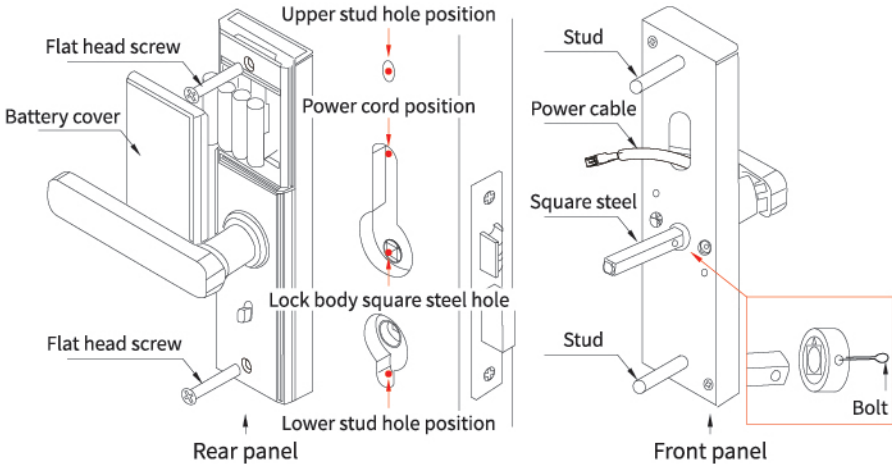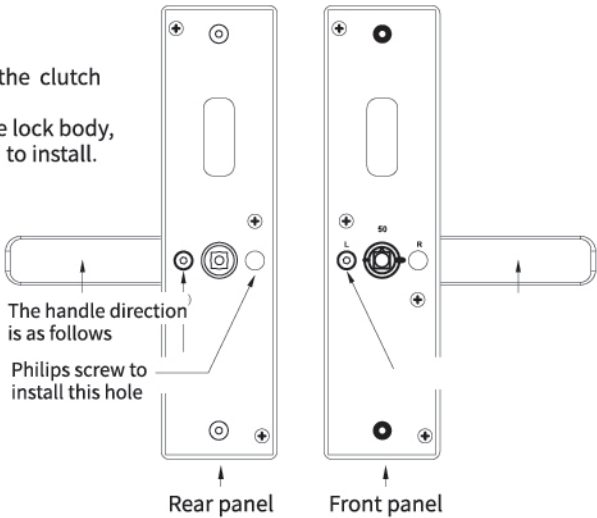

Install the front panel

1. First tighten the two studs on the front panel.
2. Insert the hole end of the square steel into the square steel hole of the front handle and align it with the two small round holes.
3. Pass the pin through the square steel hole, and bend the pin to fix the square steel on the hole.
4. Turn the square steel so that the clutch triangle symbol rotates upwards.
5. Pass the power cord from the front panel through the hole on the door.
6. Pass the upper and lower studs of the front panel through the corresponding holes on the door.
7. Pass the square steel through the square steel hole of the lock body.
8. Fasten the front panel to the door.

Install the rear panel


1. Remove the battery cover from the rear panel.
2. Connect the rear panel power cord to the front panel power cord.
3. Insert the square steel into the hole of the rear handle.
4. Align the upper and lower holes on the rear panel with the positions of the upper and lower studs on the front panel.
5. Put two flat head screws into the upper and lower holes of the rear panel, and align them with the front panel studs to tighten.
6. Install four batteries and close the battery compartment cover.
7. Test the power supply of the door lock, and the installation is complete.

APP Download and Installation


Search for "tuyazhineng" in the APP Market. This document takes smart life APP as an example to explain in detail the APP & door lock panel function.

APP Registration, Login

APP Registration:
You don't have an APP account yet, choose log in or log in via SMS verification code. Click "Create New Account" to enter the account registration page. Follow the prompts to get the SMS verification code and set the password. If you already have an account, you can click "Log in with an existing account" to log in to the app. Login mode supports password, verification code, social account login.

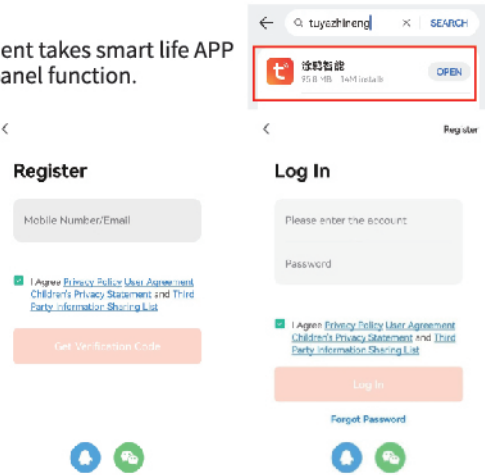


Add Device

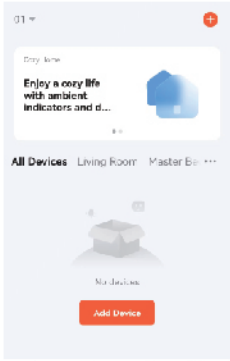

Click Add Device



Touch Fingerprint
Wake Up System
Waiting Link Device

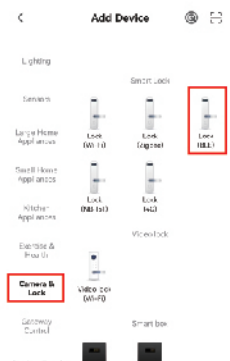


Find the Camera & Lock Select Lock (BLE)



Link Success
Click to Done




Select Start Bluetooth Click Next

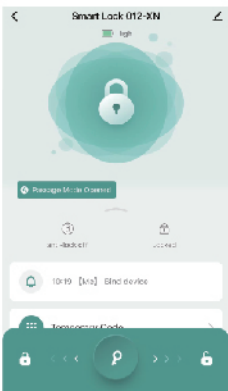


Enter the door lock
main interface


Member Management - Improving Family Members

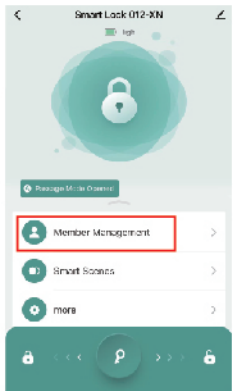


Click Member Management

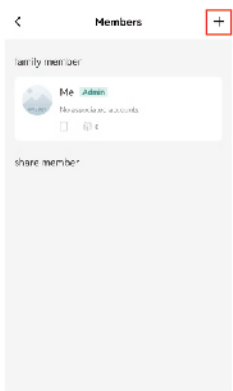


Click "+" on the top right

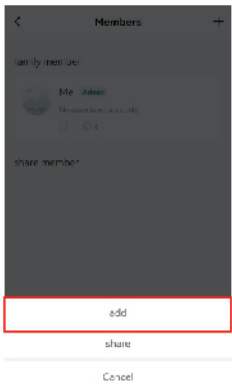


Select add

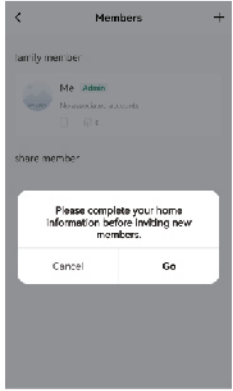

Click Go

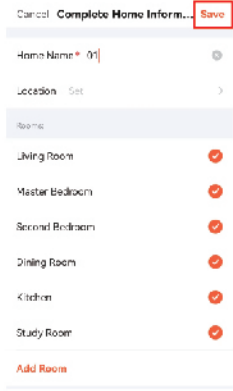


Improving Family Information Click Save

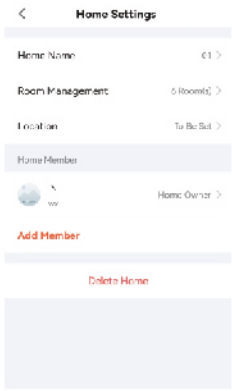


You can rename / view / add / remove when finished


Set a Temporary Code

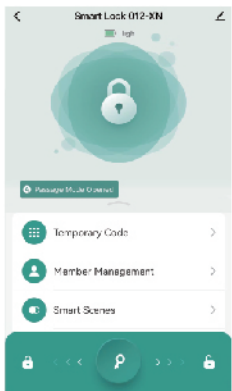

Select a temporary code in the door lock interface

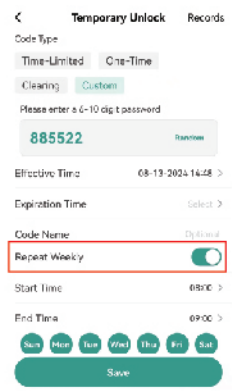


Select custom, enter the password to set the opening time click save

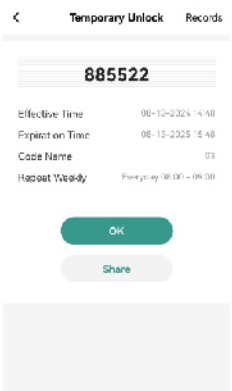


Click Finish or Share


Member Management - Set Fingerprint Permissions

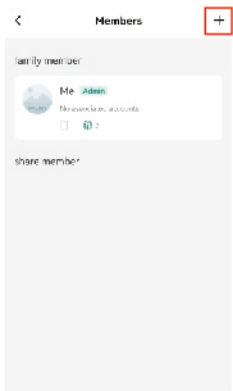

In the Member Admin Panel Click "+"

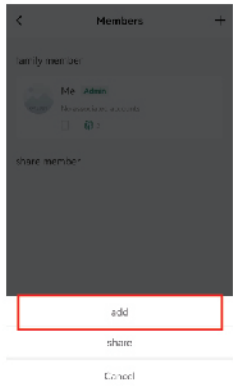


Click add

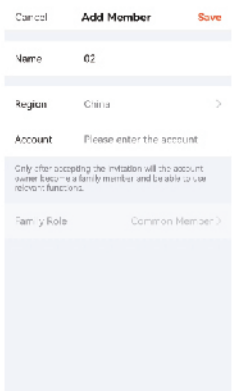


Set Member Name Click to save



In the Member Admin Panel Select the member

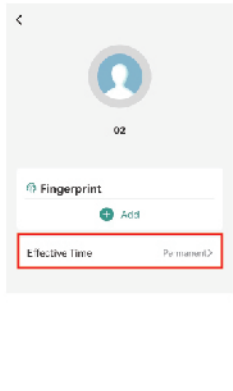


Select Effective Time

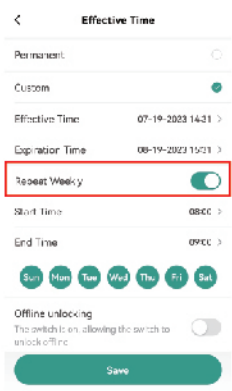


Select Custom, Set Fingerprint Permissions Click Save


Setting the Administrator Password / IC Card

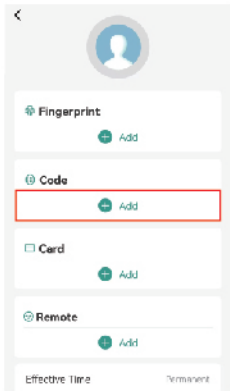


Click Add at the Password location on the Administrator screen

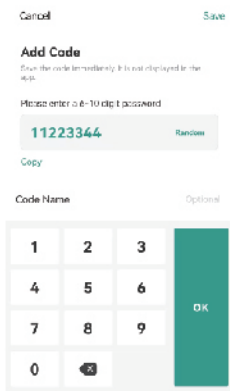


Enter the password

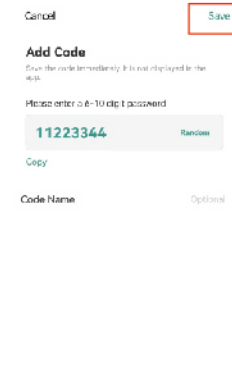


Click save, door lock voice prompt added successfully

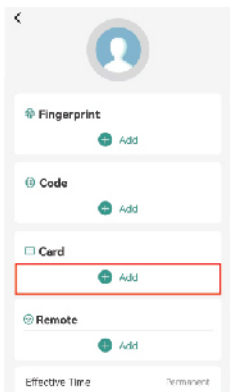

Click Add in the Administrator Screen card location

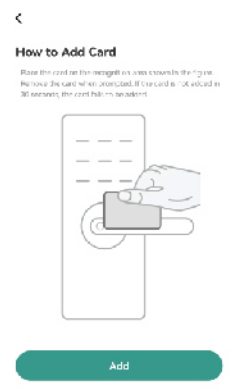


Click start to add the IC card close to the door lock swipe area

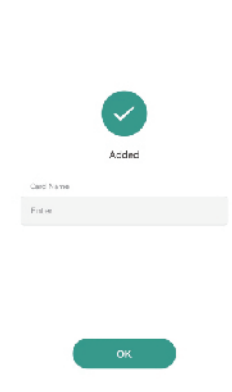

Enter the key card name and click Done

Open Door Record Query

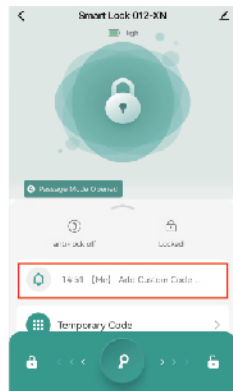


On the main page click on the area



Check the door opening


Setting the Administrator Fingerprint

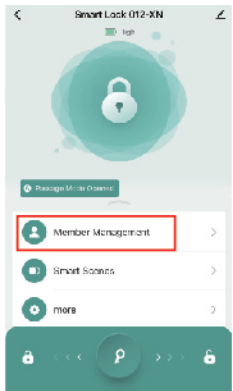

Select Member Management in Door Lock Interface




Select Me Admin

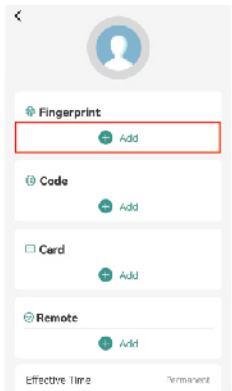


Click Add in the Fingerprint location of the Administrator Interface



Select Add

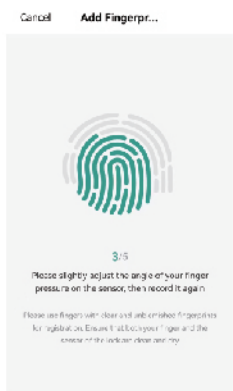


Follow the prompts for fingerprint collection

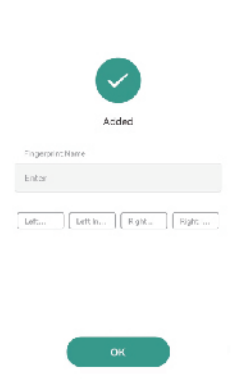


Enter the fingerprint name and click Finish


APP side unbinding

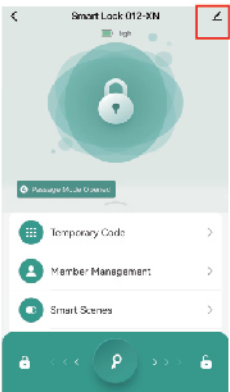

Click on the area

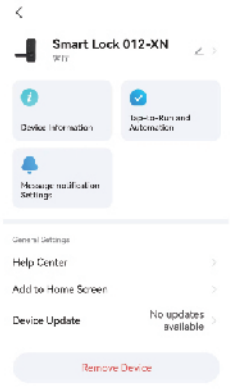


Select Unbind and Clear Data

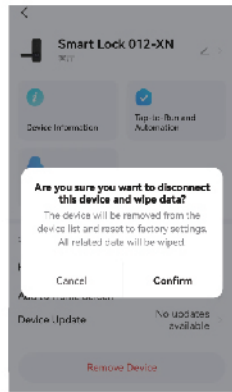

Click OK to unbind

Restore factory settings

You can also enter forced initialization mode by long pressing the initialization button on the back panel for 6 seconds; After initialization, all user information stored within the system will be eliminated, and the system will enter an initialization state.

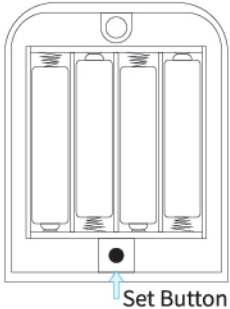

Set Button